


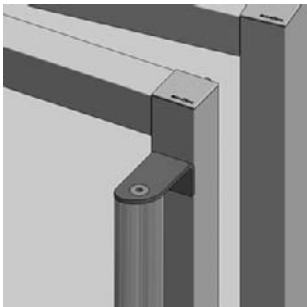
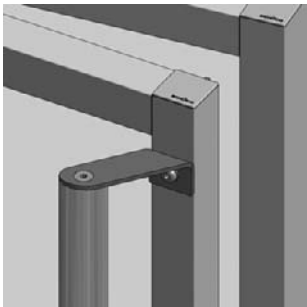


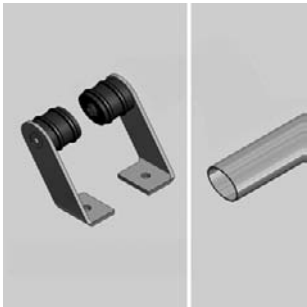


MS 40





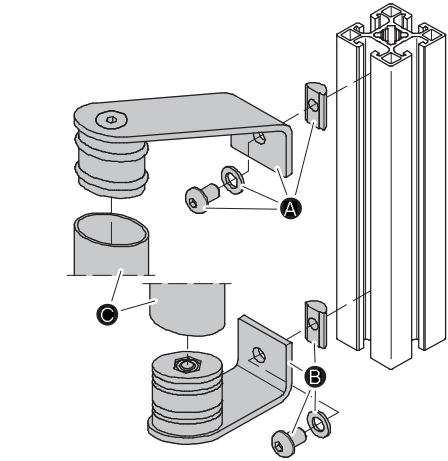




		Art.-Nr.		
mm	A C			
mm				
mm	A			
	B			
	C			

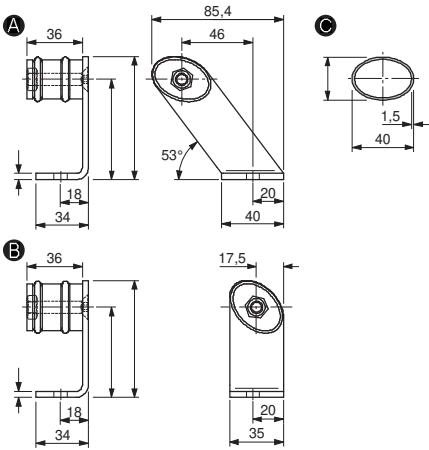

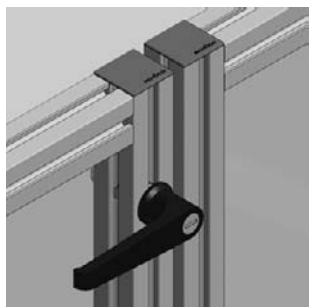


mm

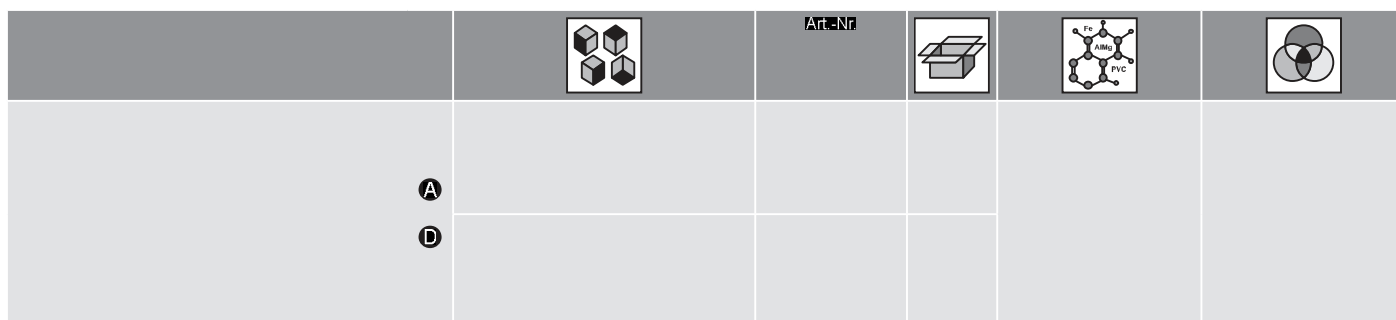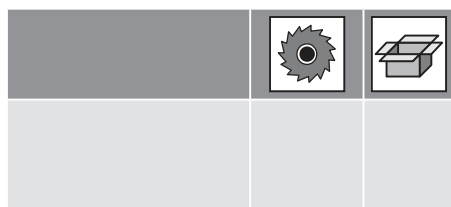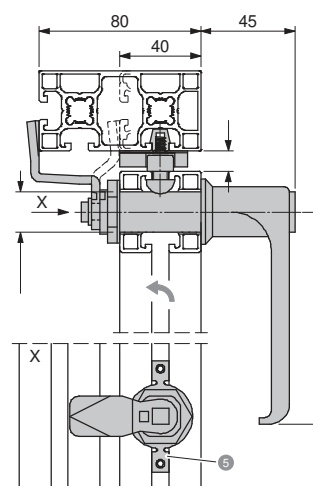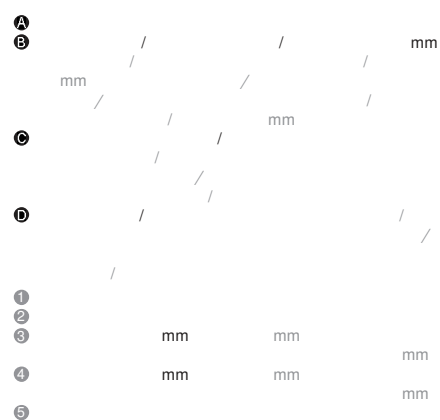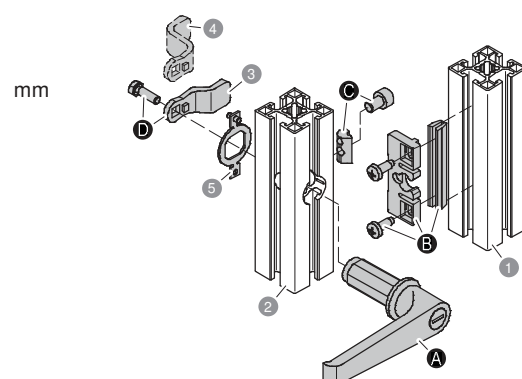

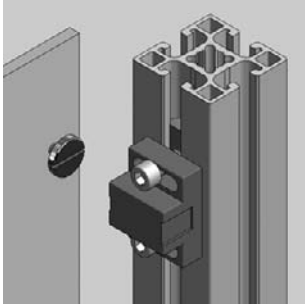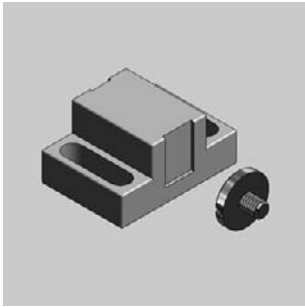

MS 40

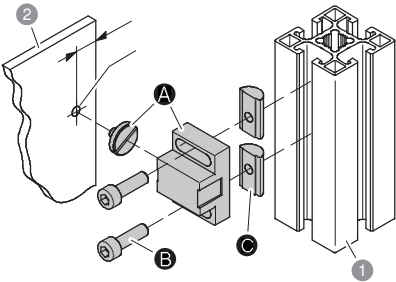



A

B


C

1

2

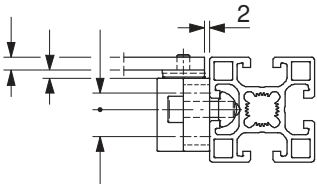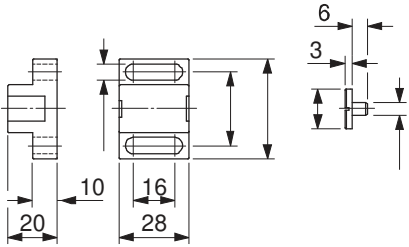


		Art-Nr			
	A				
	B				
	C				

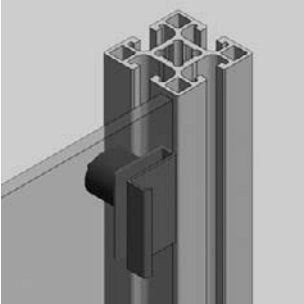

MS 40


mm

mm



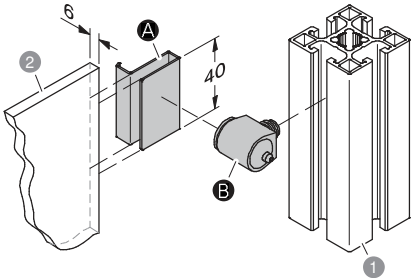


mm


- A
- B
- 1
- 2

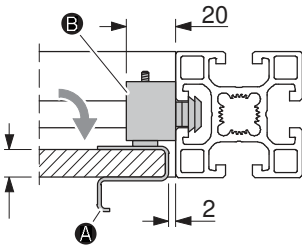

		Art.-Nr.			
A					
B					

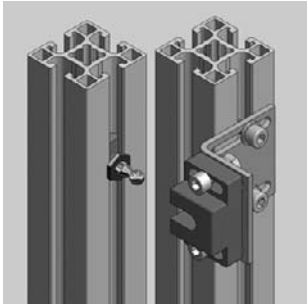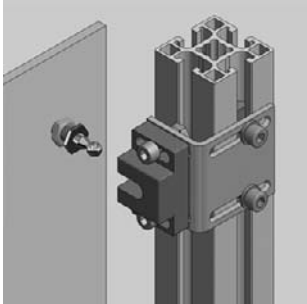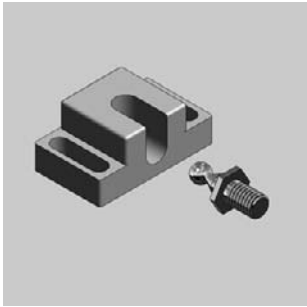




MS 40

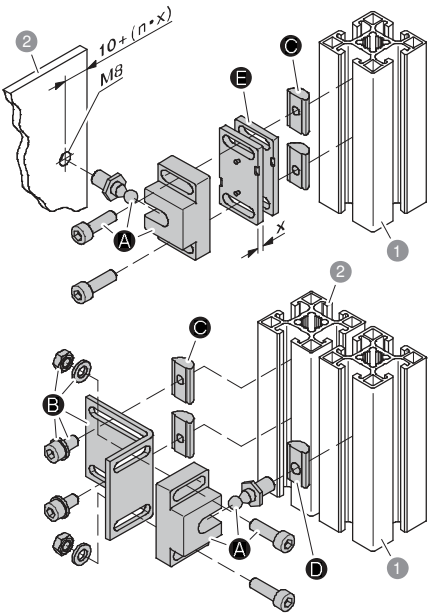

- A
- B
- C
- D
- E
- 1
- 2

		Art.-Nr.			
	A				
	D				
mm mm mm	E				


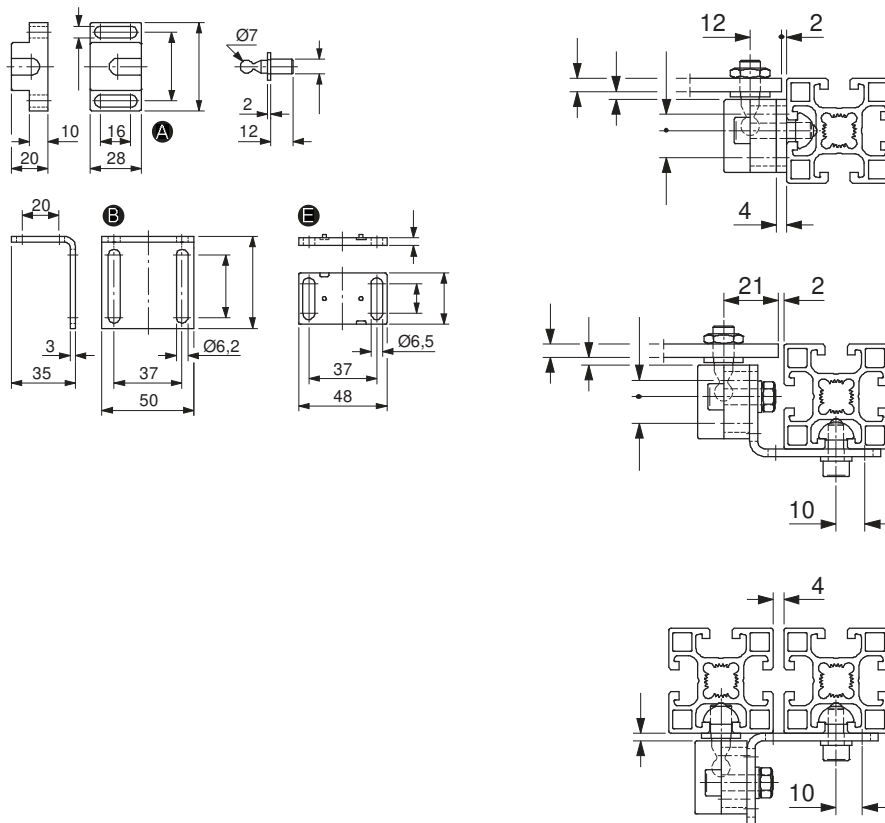


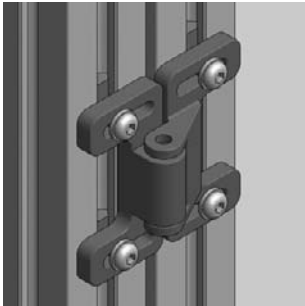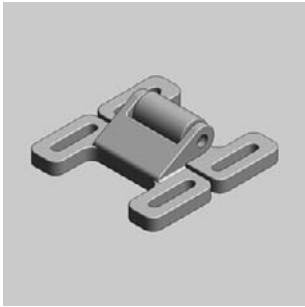


MS 40

mm

mm

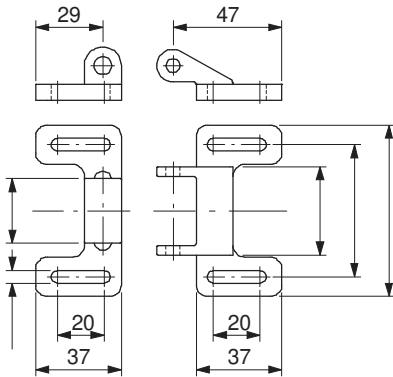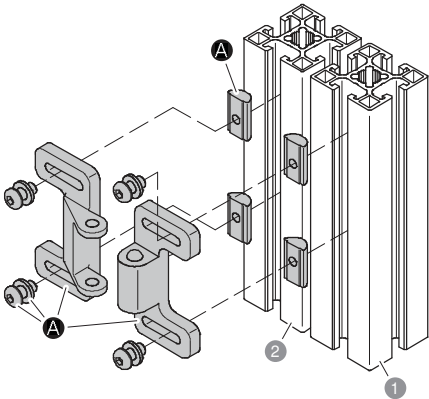

mm

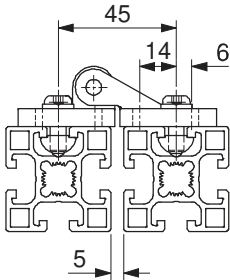


		Art.-Nr.			
	A				




mm


mm

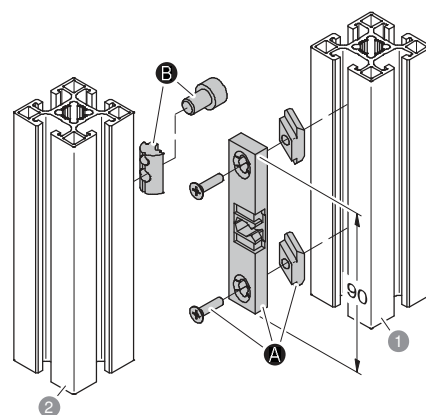


mm

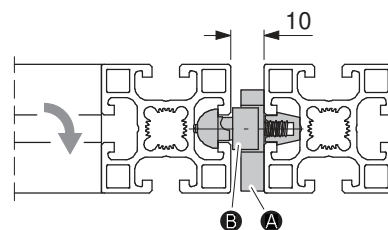


		Art.-Nr.			
	A B				

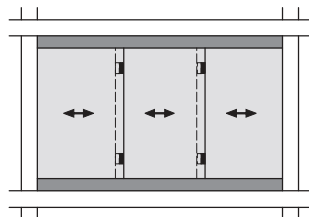


6-40

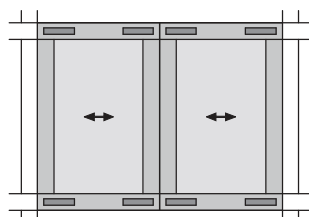



6-43


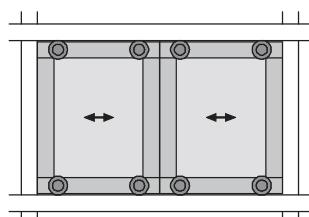


6-49

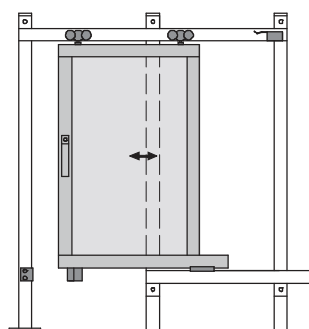

6-51

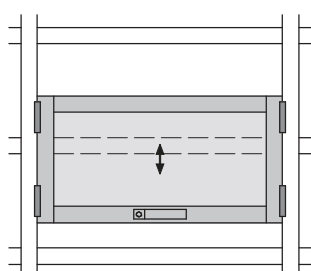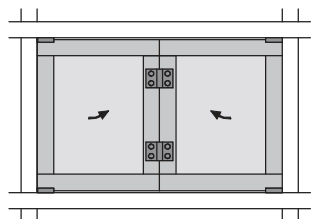

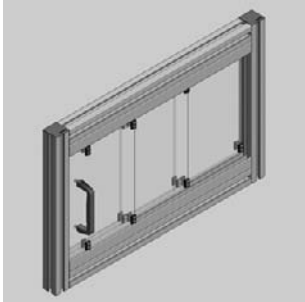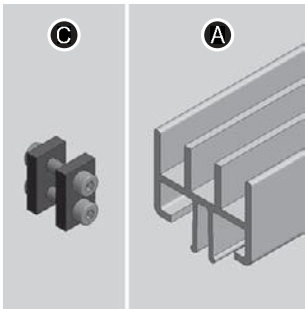

MS 40
MS 50

mm -

mm -

mm

mm -

mm -



mm -

mm -


mm

mm

		Art.-Nr.				
	A					
	B					
	C					

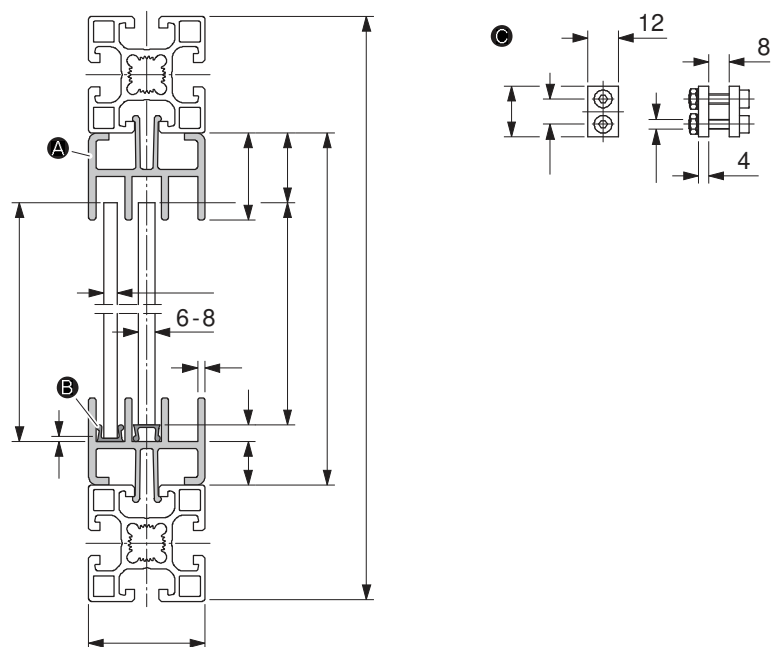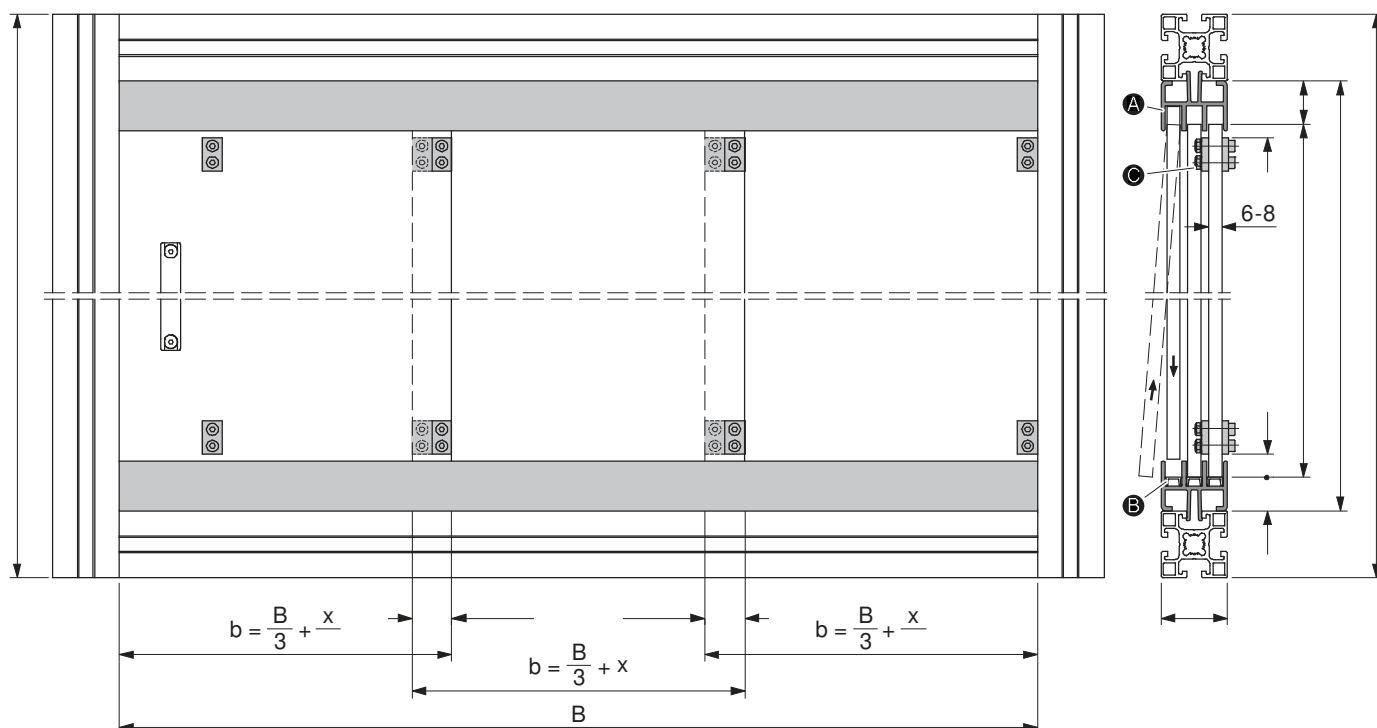

A
B
C

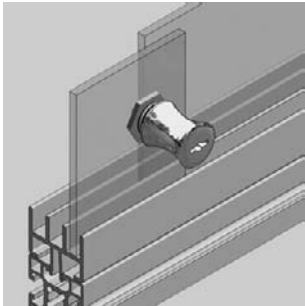


MS 40
MS 50

mm

mm

mm


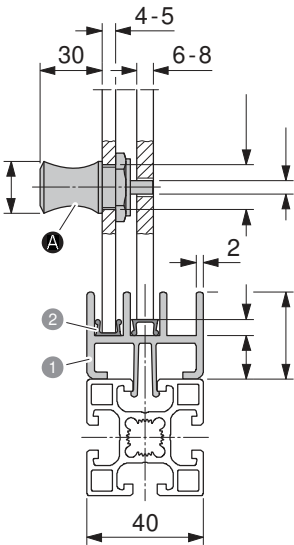


A


1

2


		Art.-Nr.		
	A			

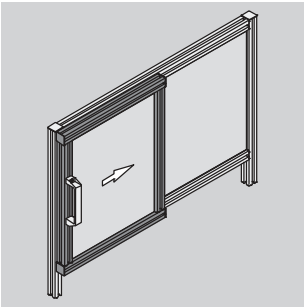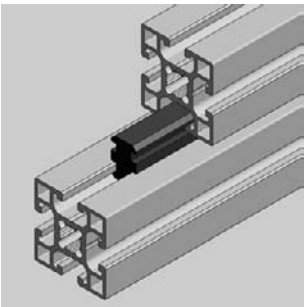


MS 40
MS 50

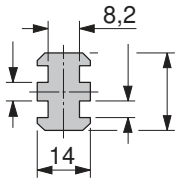


B 650 069

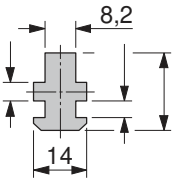

C 650 080

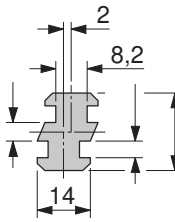


D 650 082


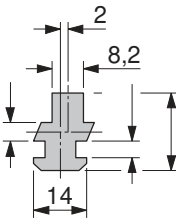


E 650 081

		Art-Nr			
mm	mm	A			
mm		B			
		C			
		D			
		E			

examples

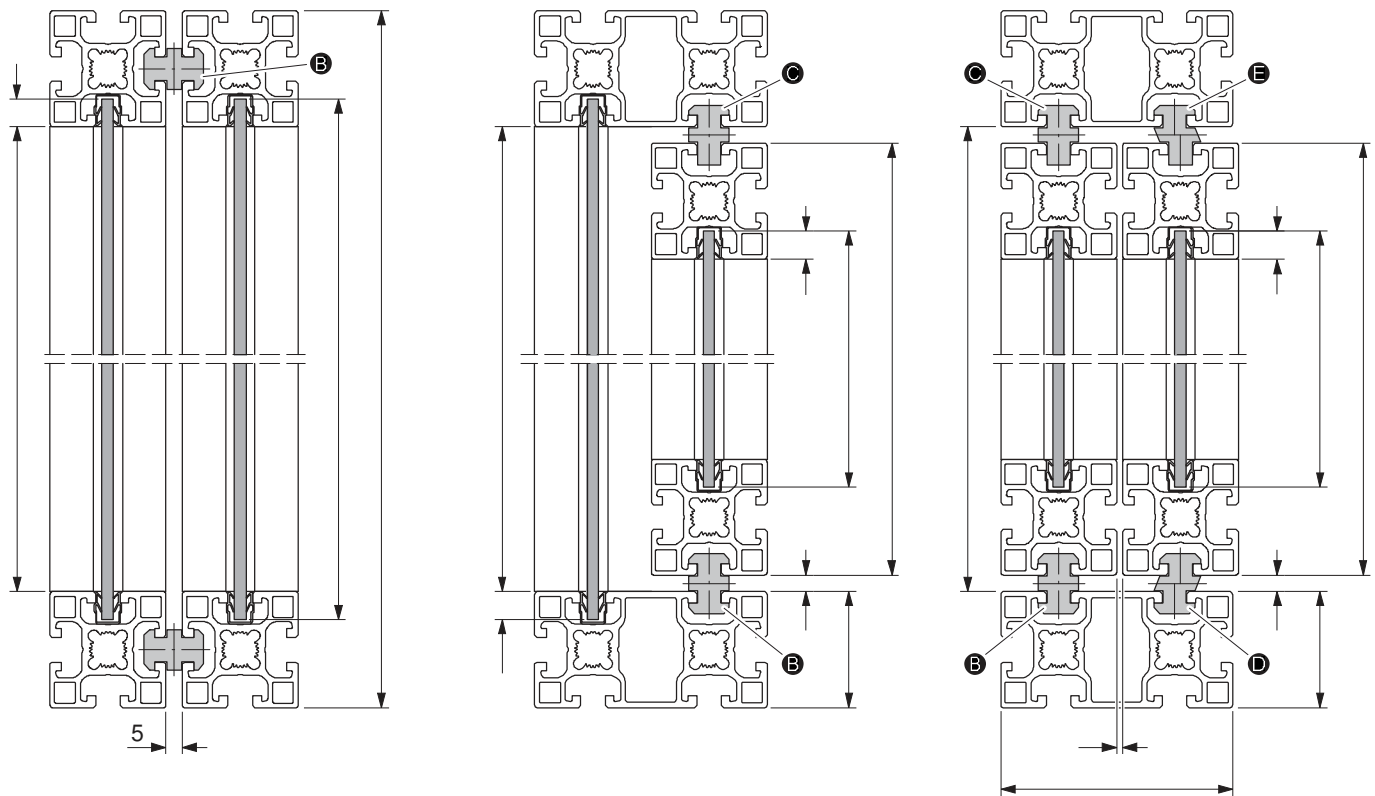

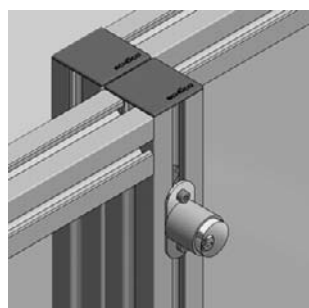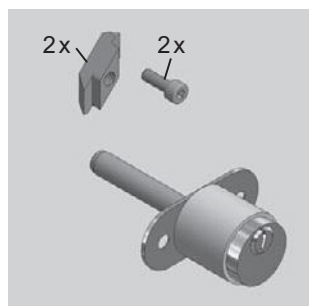


MS 40
MS 50


mm



mm

mm

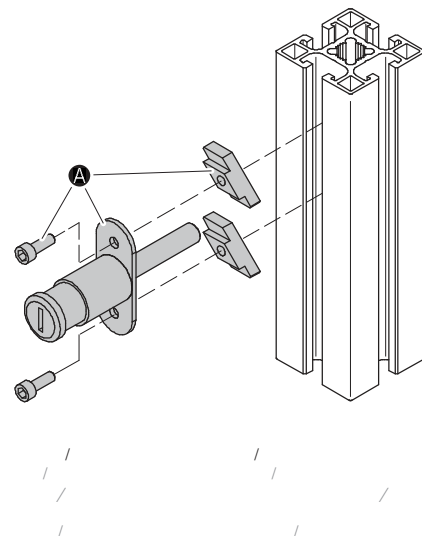

		Atent		
A				
				

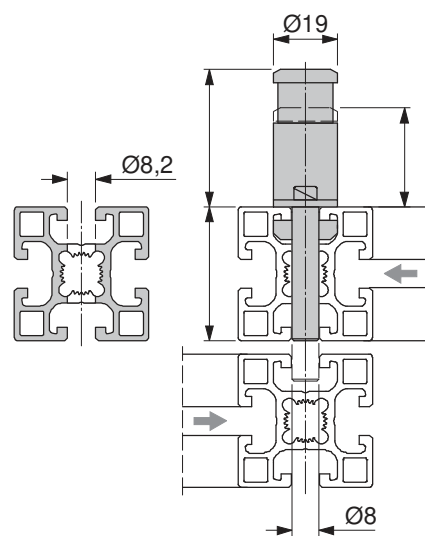


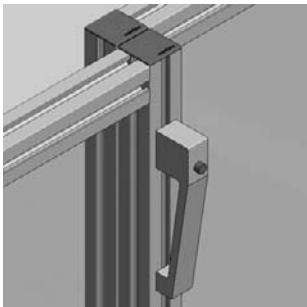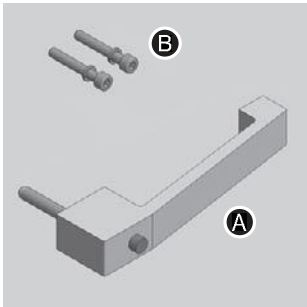

MS 40
MS 50

mm

mm

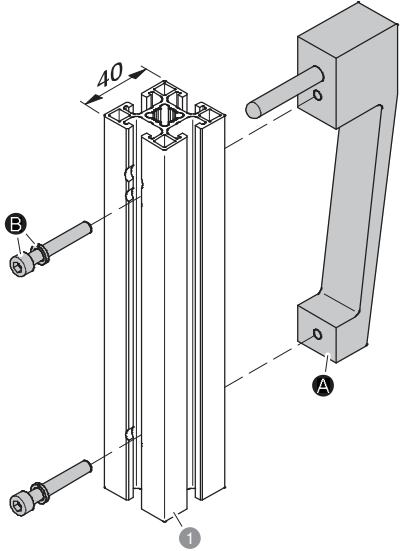


A


B

1


mm

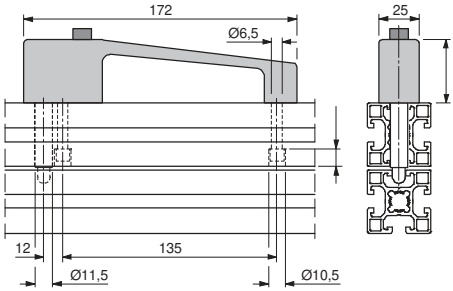

		Art.-Nr.			
		A			
		B			
					

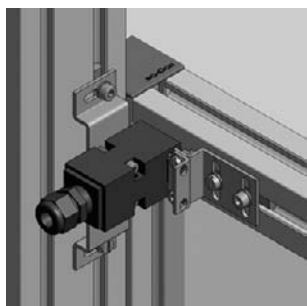

MS 40
MS 50

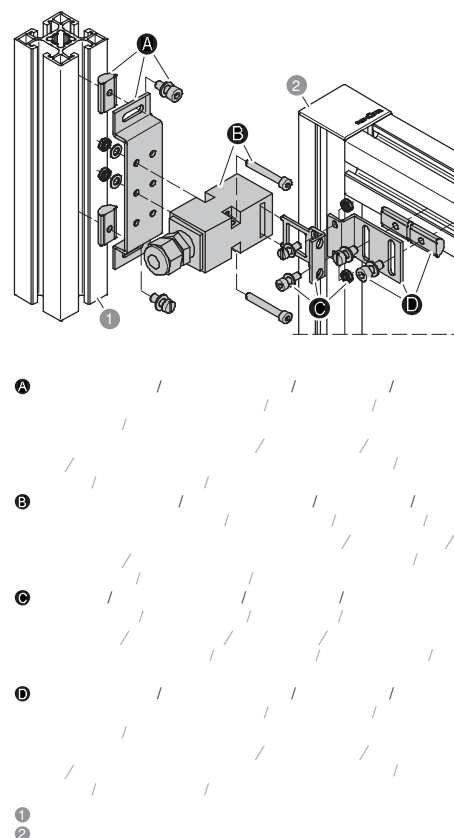

		Art.-Nr.			
	A D				

EN

EN

/ /

mm

mm

EN

EN

/ /

mm

mm

EN

EN

/ /



EN

EN

/ /

mm

mm

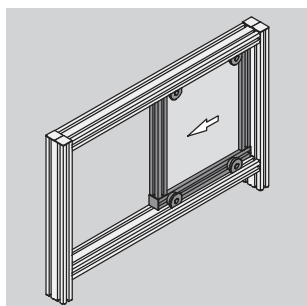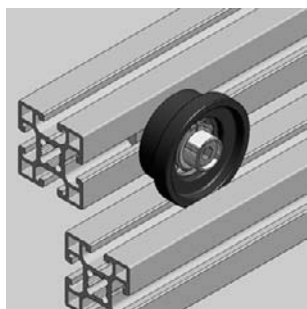



MS 40
MS 50

mm

kN

mm

kN

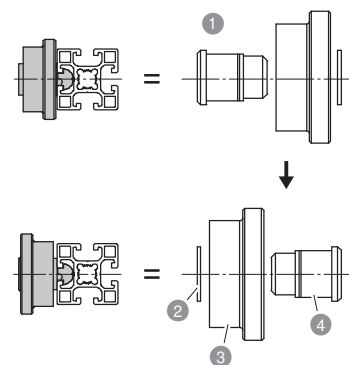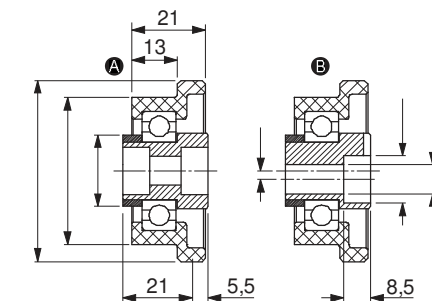


- 1
- 2
- 3
- 4

mm
kN

			Art.-Nr.			
	A					
	B					


examples

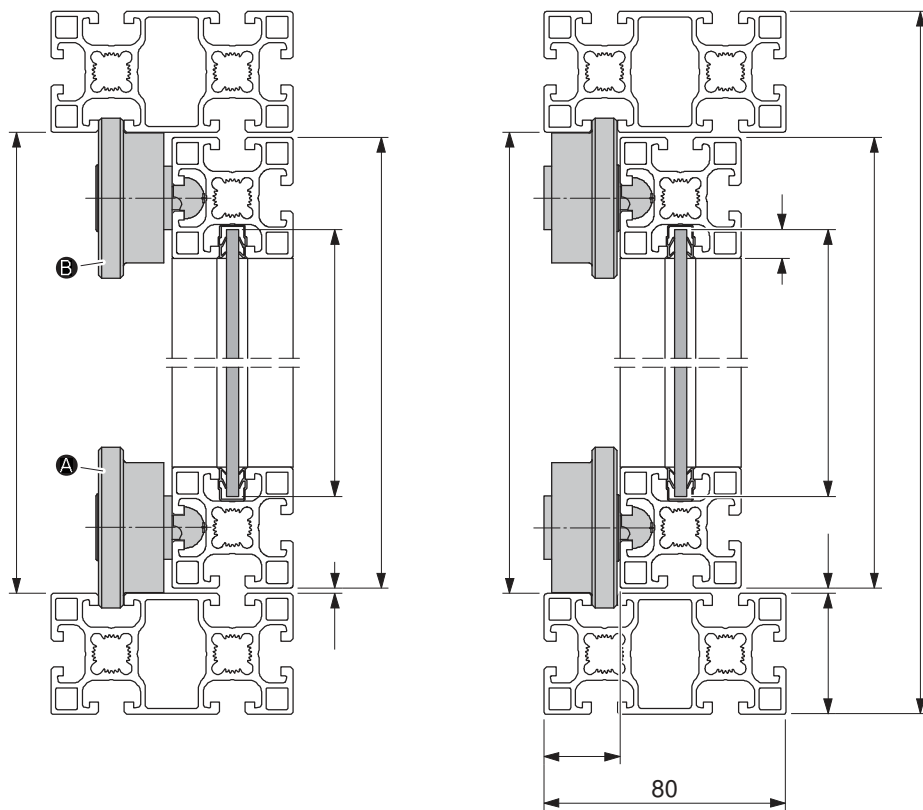

Stückliste

A

B

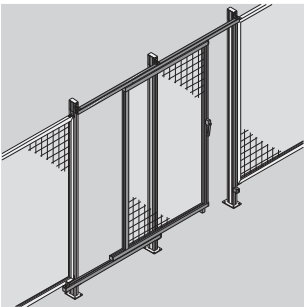

MS 40

MS 50

= mm

=

MS 40 H

MS 40 B

= mm

MS 40 B

MS 40 H

MS 40 H

MS 40 B




= mm




MS 40 B

MS 40 H


		Art.-Nr.				
	A					
	B					
	H					
	I					
	J					



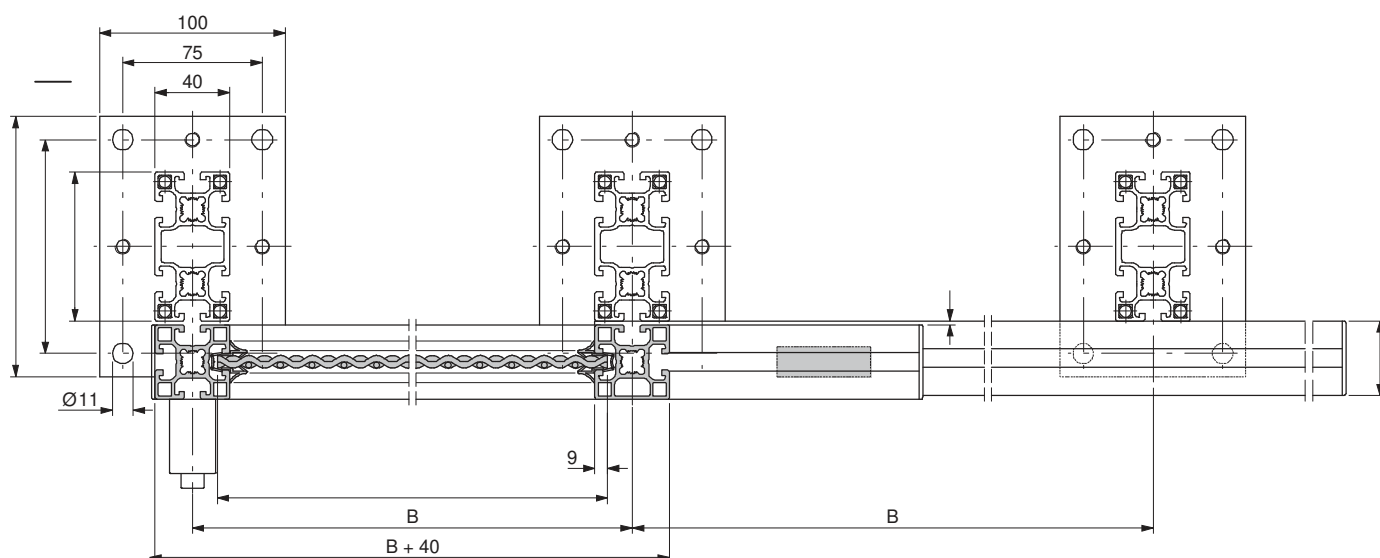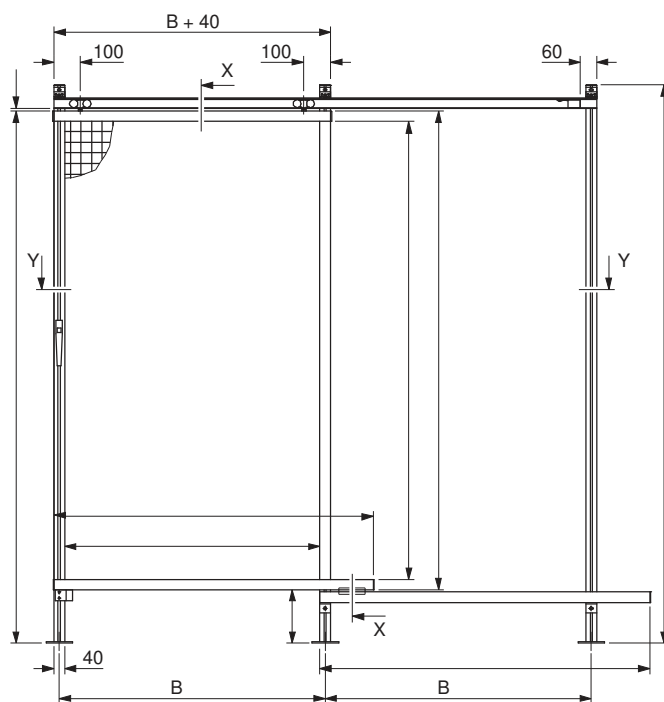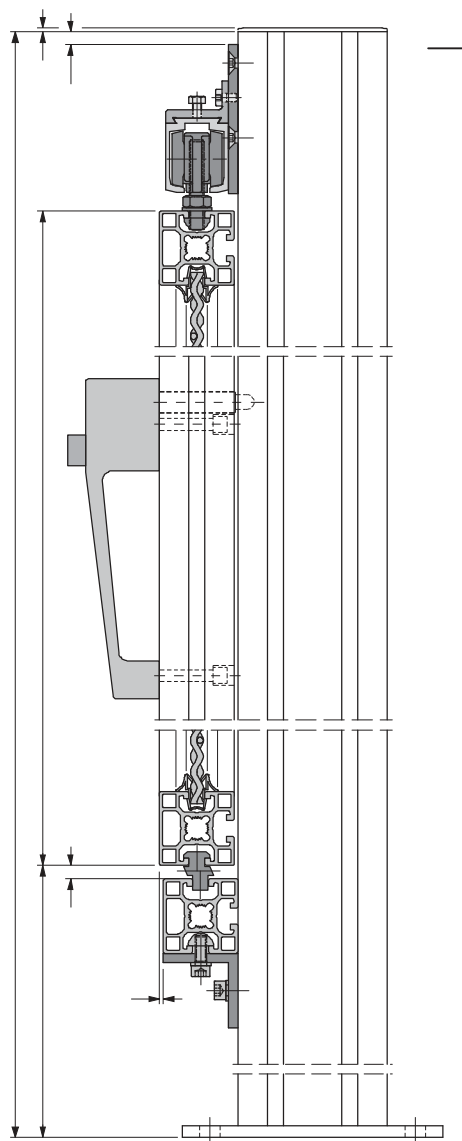

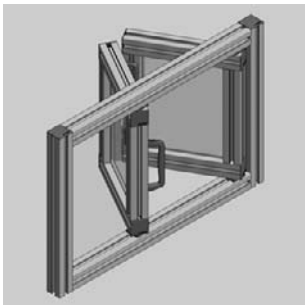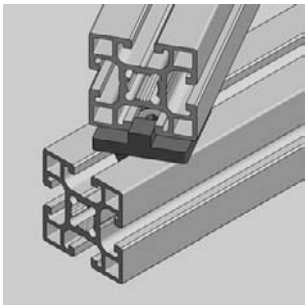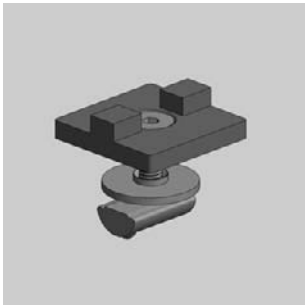

MS 40
MS 50

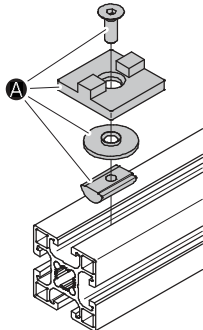

		Art-Nr			
A					

Technical drawing of a window frame assembly, showing front and side views with dimensions.


Front View Dimensions:

- Overall width: B
- Overall height: B
- Left side dimensions (from left edge): 40, 7, B , 5, B , 7, 40.
- Right side dimensions (from right edge): 40, 7, B , 5, B , 7, 40.


Side View Dimensions:

- Overall width: 40
- Overall height: B
- Dimensions from top edge: 40, 7, B , 5, B , 7, 40.
- Dimensions from bottom edge: 40, 7, B , 5, B , 7, 40.

The drawing includes a detailed view of the window frame assembly, showing the frame, sash, and hardware. The dimensions are provided in millimeters (mm).

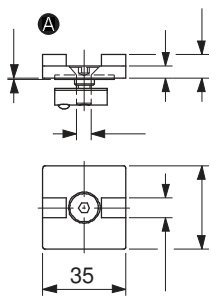


A / / M6x16 / /

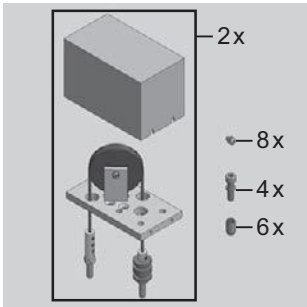

kg

mm

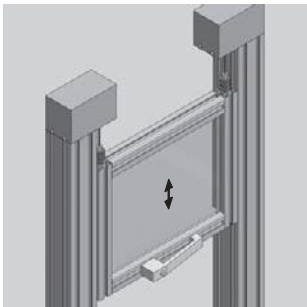

kg

mm

kg

mm

MS 40

MS 50

		Art-Nr			
	A				
	D				
mm	E				
	F				
mm	G				



